
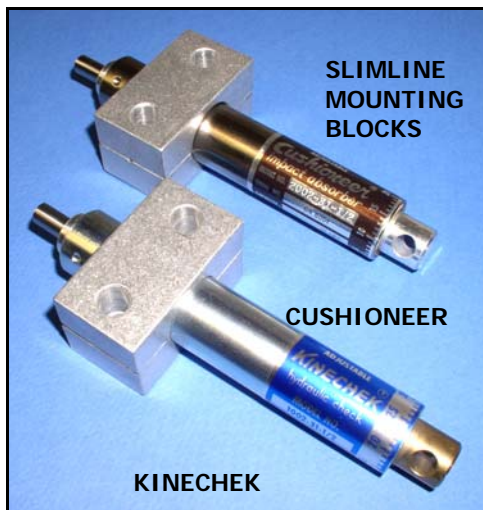
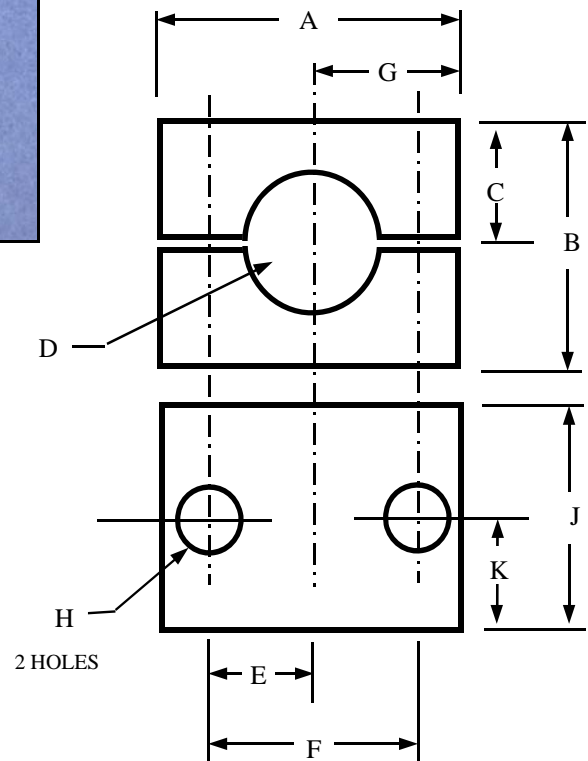


# MOUNTING BLOCKS FOR ALL DESCHNER SHOCK ABSORBERS AND SPEED REGULATORS

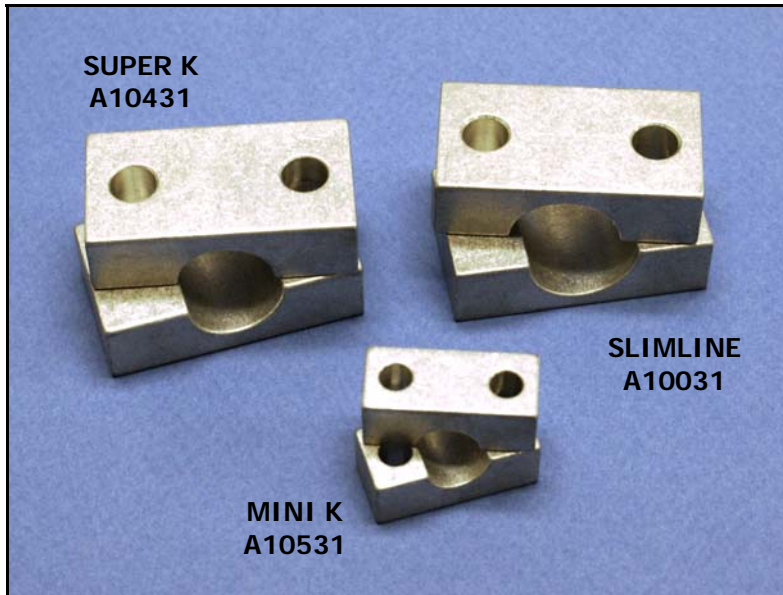

MODEL TYPE	A	B	C	D	E	F	G	H	J	K
MINI K A10531	1.38	1.00	.50	.500 Dia.	.437	.875	.690	.265 Dia.	.625	.312
SLIMLINE A10031	2.25	1.25	.625	.937 Dia.	.718	1.437	1.12	.393 Dia.	1.25	.625
SUPER K A10431	2.25	1.25	.625	.812 Dia.	.718	1.437	1.12	.393 Dia.	1.25	.625

Note: Slimline Mounting Block P/N A10031 is used for all Slimline Kinecheks and Cushioneers